

Installation Instructions

Installation Guide for Eco-Saver Remanufactured Inkjet Cartridges

Notice: Please be noticed the reusable print head and one of the ink cartridges have been assembled together. Do not throw away the printer head until 3 pack cartridges used up.

1 Reusable Print Head



—— BK ——



—— Tri-color ——

3 Pack Cartridges



► The first time you use this product:

- 1.Remove the cartridge from the printer when it used up.
- 2.Open the print head cover and tear off the yellow sealing.
- 3.Install the new ink cartridge with print head into the printer.



► The second/third time you use this product:

Recommendation: To maintain the best printing performance, it is better to change the pack cartridge when the ink volume of cartridge is low (There will be a reminding on the printer.)

- 1.Remove the cartridge from the printer when it used up.
- 2.Press the 'push' button to take out the spent pack cartridge.
The print head can be reusable, pls do not throw it away.
- 3.Remove the cover of a new cartridge.
- 4.Properly reassemble the new cartridge and the reusable print head.
To us the tissue to wipe and clean the print-head.
- 5.Install the new ink cartridge with print head into the printer.



► Notice:

Our products are remanufactured products. Please be noticed when the remanufactured cartridge is installed, the printer prompt is different from original cartridge's.

Install remanufactured cartridge	Cartridge Low	Cartridge Used Up
When installing the cartridge, there will be a reminding 'Previously used genuine HP cartridges installed'	To maintain the best printing performance, it is suggested to change the pack cartridge when the ink volume of cartridge is low.	When the printer prompts "Ink Cartridges Problem" or "Cartridges Error" after "Cartridge Low" prompt, it indicates that the cartridge used up and you need to replace a new one. It is not quality problem.